

Steps for installing the take up spool on Synthesis

Step 1.

Knock out the square hole in the back panel. Mount the socket.



Step 2.

Connect the extra wires 7 and 8 to the connector outlet.




Step 3.

Connect the green wire to the ground terminal.



Step 4.
Remove the winder housing and mount
the assembly to stand.

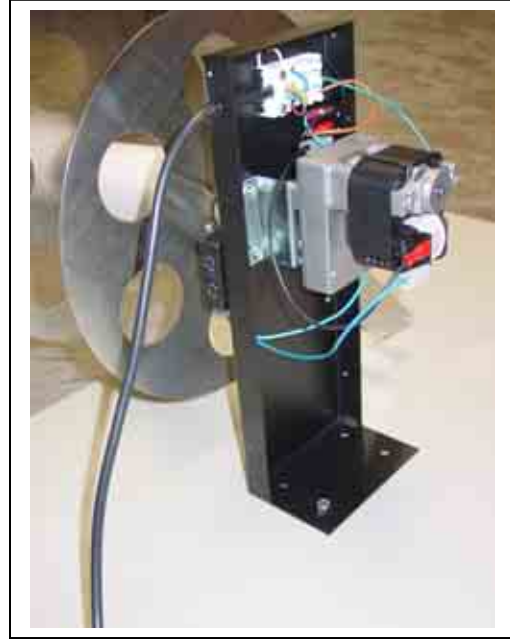

Step 5.
Install the housing.



Step 6.
Install lower film guide to the left table
leg.



Step 7.
Install the upper film guide to the machine.



Step 8.
Connect the power cord to the new socket.

CODICE GRUPPO GROUP CODE	DENOMINAZIONE GRUPPO GROUP DESCRIPTION
AV020A80	Gruppo avvolgitore film 230V / 230V film winder group
AV020E80	Gruppo avvolgitore film 115V / 115V film winder group

